

Tupperware®

PREMIAGLASS

Borosilicate Container



Tupperware PREMIAGLASS Borosilicate Container offers versatility at its best - crafted from 100% borosilicate glass, the multi-purpose container delivers the flexibility of using it in the freezer, microwave and oven. A sleek addition to any kitchen, uniquely designed with aesthetically beautiful yet functional smart locking lids that are Instagram worthy.

FEATURES & BENEFITS

- **Crystal-Clear Glass Base**
 - Crystal Clear Clarity base makes it easy to see what's inside.
- **Clip-Secure Lid System – 100% Airtight & Leak Proof Performance**
 - 4-latch smart-locking lids that uses secure fitting lids with a silicone seal to keep food 100% air-tight and leak-proof.
- **Multipurpose – Bake-Store-Reheat-Serve**
 - Tupperware PREMIAGLASS is made of borosilicate glass that can go safely from freezer to microwave or pre-heated oven (without the lid) all in the same dish, saving you the hassle of extra washing!
- **Made with 100% Borosilicate Glass**
 - With heat-resistant glass material that can withstand temperature up to 300°C.
- **10% lighter than tempered glass**
 - Lightness that lifts a burden off your wrist.
- **Stain and Odor Resistant**
 - Made from non-porous glass that does not absorb food odor, flavors or stains.
- **Stackable**
 - Allow you to maximize space in the cupboard, pantry and fridge.
- **Freezer, Dishwasher, Oven and Microwave Safe (without the lid)**
 - Made with heat resistant glass that never warps or crack with proper use & care.


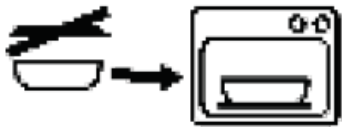



USE & CARE

- **Microwave Safe:** Use for reheating in the microwave (excluding microwaves with a browning element). When reheating in the microwave, remove lid and cover with paper towel to prevent splatters.
- **Oven Safe:** Only glass vessels can be used in conventional ovens and lids should be removed at all times. Oven safe temperature is up to 300°C.
- **Refrigerator and Freezer Safe:** When using the glass vessel for storing food in refrigerator or freezer, please remove the lid and allow glass vessel to sit for 1 – 2 minutes before placing in the microwave and/or oven. When freezing, only fill container 75% to allow room for expansion.
- **Do not** use on or under a flame or other direct heat sources.
- **Do not** use on stovetop, under browning element, on a grill or in a toaster oven.

CLEANING GUIDELINES

- Always wash your products before first use.
- Wash in hot, soapy water and rinse well, or wash in the dishwasher.
- When placing in dishwasher, avoid mechanical shock by allowing sufficient space between the glass vessels.
- After using in the oven, ensure the glass cools properly prior to washing, to avoid thermal shock.
- To remove any stubborn stains or food residue, soak briefly in warm soapy water before washing.
- Do not use abrasive cleaning pads or abrasive cleaners, as these will scratch the base and plastic lid.

WARNING: As with all glass products, failure to carefully follow the use and care instructions may cause the product to break, which could result in property damage and serious personal injury.

				
Safe for Food	Remove Lid when used in Oven and Microwave	Microwave Safe	Oven Safe	Dishwasher Safe

THE TUPPERWARE COMMITMENT

Our products reflect our commitment to making a measurable impact on the world around us. At Tupperware, we design all products with minimizing plastic and food waste in mind. By creating quality, durable and reusable products made to stand the test of time, we're supporting our mission to reduce waste for the longevity of our planet, our people and the communities in which we live and work.

The Tupperware PREMIAGLASS Borosilicate Container Vessel is covered by a Tupperware warranty against any material or manufacturing defects that may occur when using the product according to directions (use and care guidelines) and in normal household use, for 30 days from date of purchase.

The Tupperware PREMIAGLASS Borosilicate Container Lid is covered by Tupperware Lifetime Warranty, warranted by Tupperware under normal non-commercial use against chipping, cracking & breaking without impact or peeling for the lifetime of the product based on use and care guidelines.

The warranty does not cover damage to the product resulting from negligence of improper care or accidents which includes overheating, stains, cracks and scratches on the inside and outside of the product, or any damage caused by storage of improper materials not intended for household use (such as chemicals).

The warranty does not cover damage caused by normal wear and tear. Please see USE & CARE section for more details.

Your Tupperware product is meant to be used again and again. If for any reason your product is damaged and not covered by warranty or you no longer need your product, please be responsible and recycle it, or let us know if we can help you.